


WB457AB lawn aerator MACHINE PARTS BREAKDOWN

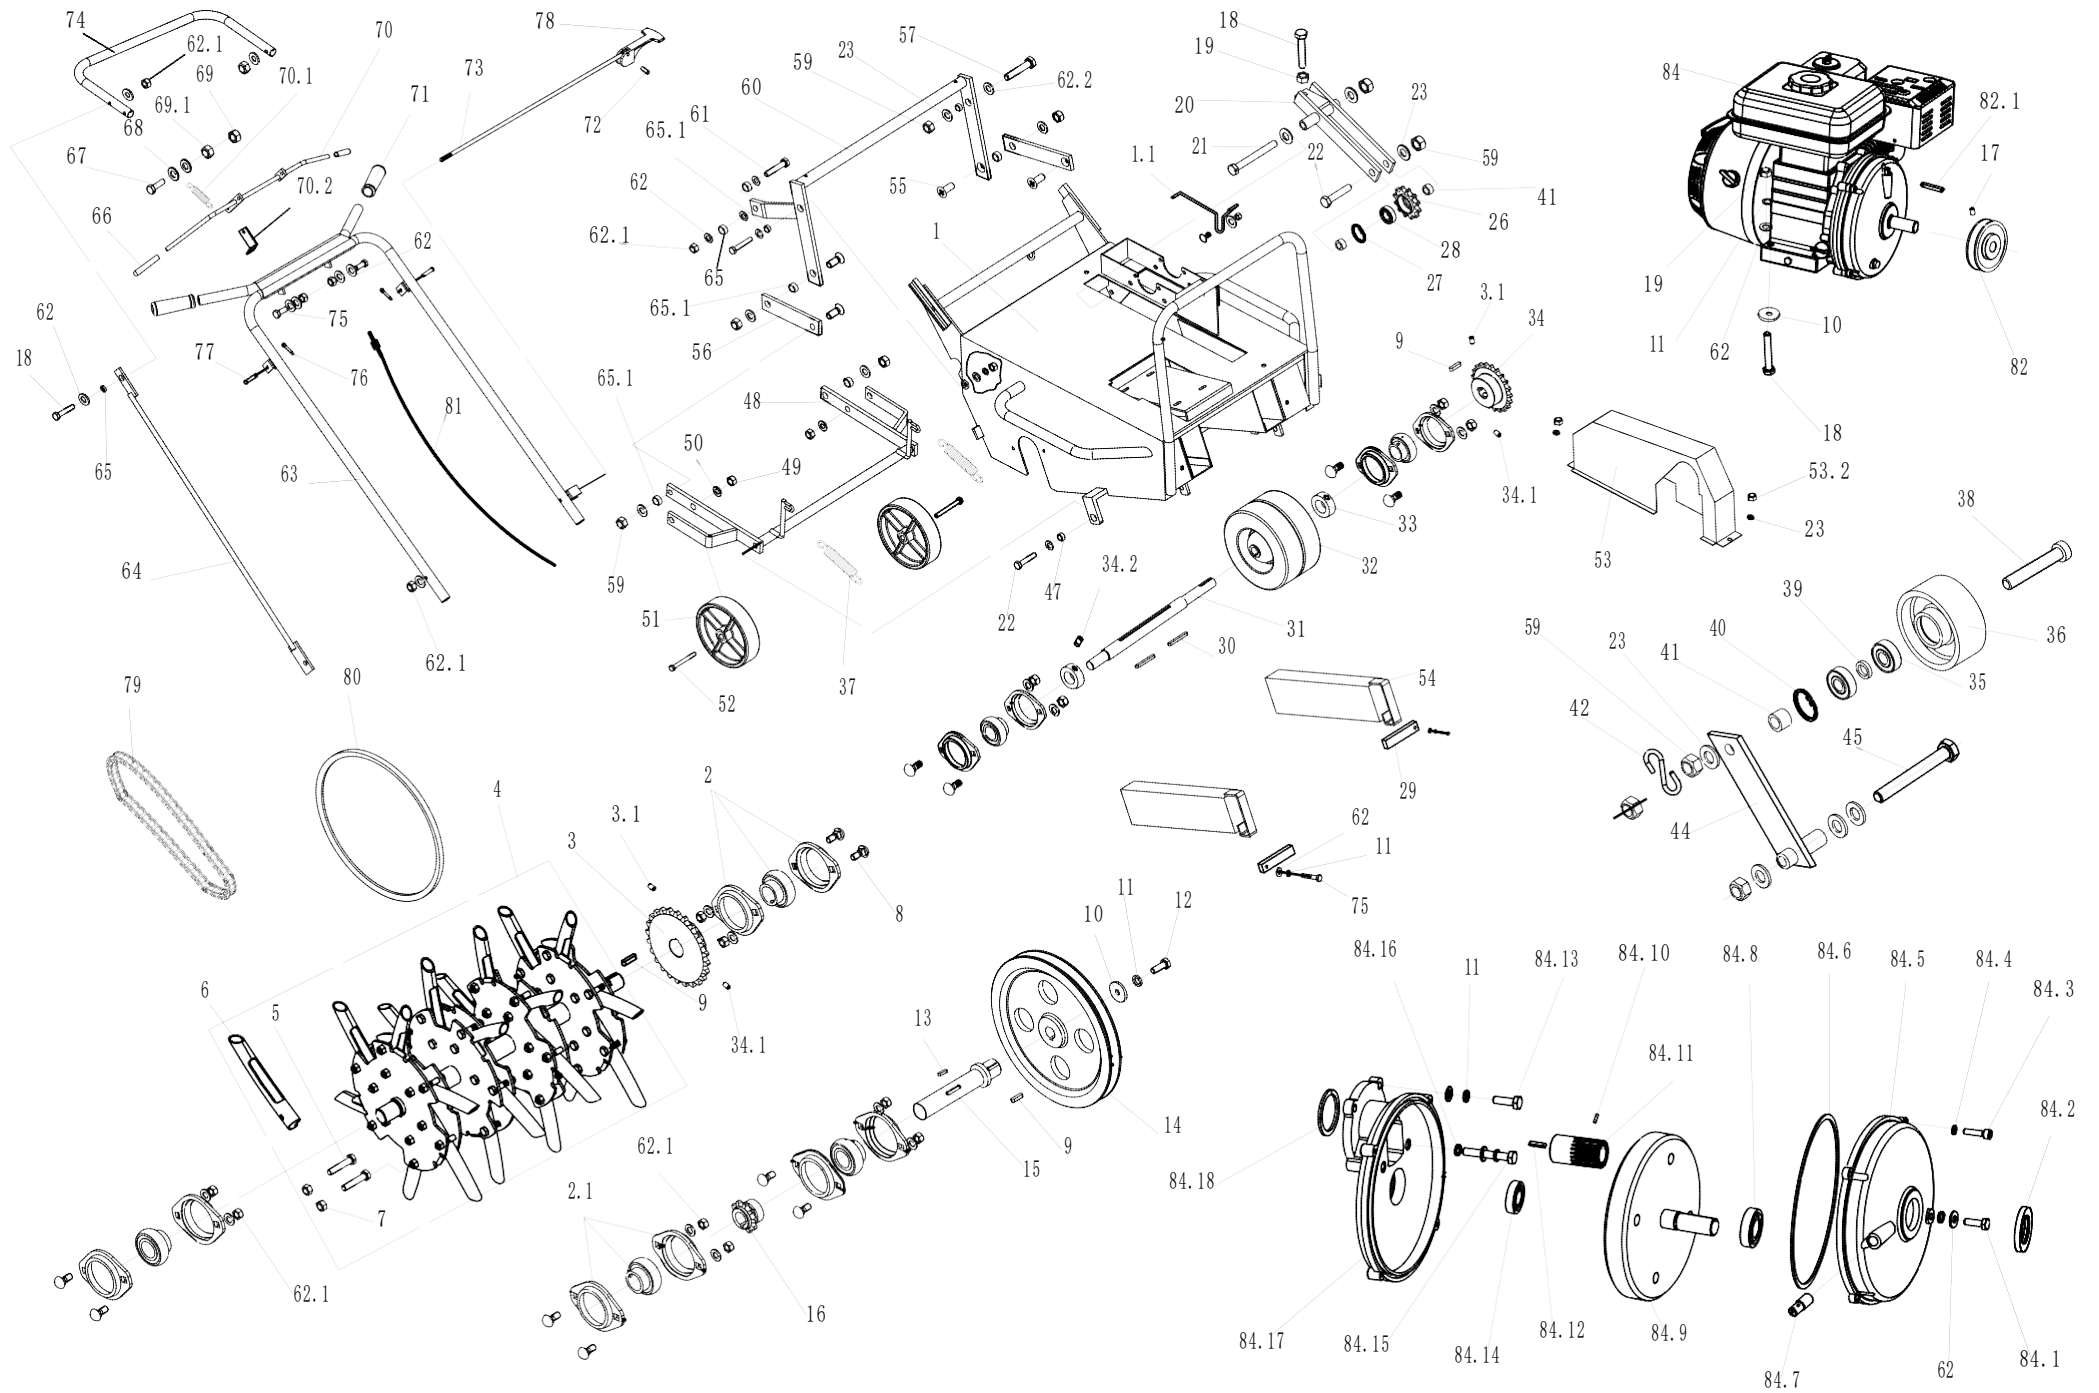

WB457AB lawn aerator MACHINE PARTS LIST Machine code: 45AB055002

CODE	WB REF	chinese name	english name	QTY
1	45A0101010	机壳总成	chassis	1
1,1	45A0222010	限位器	bracket	1
2	PFLSA205	冲压菱形座外球面轴承	spherical surface bearing	2
2,1	PFLSA204	冲压菱形座外球面轴承	spherical surface bearing	4
3	45A0203010	链轮3	Sprocket3	1
3,1	0105008016	内六角平端紧定螺钉	screw	2
4	45A0202000	打孔轴总成	forks group	1
5	0101008040	六角螺栓	bolt	48
6	51A0406010	打孔头	fork	24
7	0203008000	全金属自锁螺母	lock nut	48
8	0107008020	小半圆头低方颈螺栓	square neck bolt	13
9	1101006025	平键	key	3
10	0303008000	平垫（加大加厚）	flat washer	5
11	0401008000	弹垫	spring washer	11
12	0101008020	六角螺栓	bolt	3
13	1101006030	平键	key	1
14	45A0211010	大带轮	big pulley	1
15	45A0210010	带轮轴	shaft	1
16	45A0212010	小链轮	Sprocket	1
17	0105008010	内六角平端紧定螺钉	lock screw	2
18	0101008045	六角头螺栓	bolt	6
19	0201008000	六角螺母	nut	5
20	45A0216010	紧链轮架	tensional arm	1
21	0101010100	六角螺栓	bolt	1
22	0101010050	六角螺栓	bolt	3
23	0301010000	平垫圈	flat washer	19
24				

26	51A0137010	紧链链轮	tensional Sprocket	1
27	0901030000	孔用挡圈	check ring	1
28	6200Z	深沟球轴承	bearing	1
29	45A0131010	配重压板	spacer	2
30	1101006060	平键	key	2
31	45A0205010	前轴	front shaft	1
32	51A0202010	前轮部件	front wheel	2
33	45A0208010	挡圈	spacer	2
34	45A0209010	链轮2	Sprocket2	1
34, 1	0105008020	内六角平端紧定螺钉	lock screw	2
34, 2	0105008008	内六角平端紧定螺钉	lock screw	4
35	6000ZZ	轴承	bearing	2
36	46R0129010	紧轮	tensional wheel	1
37	45A0301010	拉簧	spring	2
38	0103010060	内六角圆柱头螺钉	inner hex bolt	1
39	51A0126010	隔套 I	spacer	1
40	0901026000	孔用挡圈	check ring	1

41	46R0130010	隔套 II	spacer	3
42	51A0322011	S形拉钩	hook	1
43				
44	45A0213010	涨紧轮架	tensional arm	1
45	0101010080	六角头螺栓	bolt	1
46				
47	45A0339010	压架杆支撑隔套	spacer	2
48	45A0302010	轮支架	wheel bracket	1
49	0203014000	I型全金属锁紧螺母	lock nut	2
50				
51	45A0309010	轮	wheel	2
52	45A0308010	轮轴螺栓	wheel bolt	2
53	45A0132010	皮带护罩	belt cover	1
53, 1	0401010000	弹垫	spring washer	2
53, 2	0207010000	盖型螺母	nut	2
54	45A0128010	配重块	block	2
55	0108010030	十字槽沉头螺钉	cross slot screw	4
56	45A0310010	接杆	linkage	2
57	0101010040	六角头全螺纹螺栓	bolt	2
58				
59	0202010000	I型非金属自锁螺母	lock nut	11
60	45A0312010	压杆架总成	bracket	1
61	0101008045	六角头螺栓	bolt	1
62	0301008000	平垫圈	flat washer	35
62, 1	0202008000	I型非金属自锁螺母	lock nut	21
62, 2	0302010000	大垫圈	big washer	2
63	45A0318010	大把手总成	handle bar	1
64	45A0316010	拉杆	linkage	1
65	45A0311010	隔套1	spacer1	3
65, 1	45A0338010	隔套2	spacer2	6
66	45A0329010	小把手套	grip sheath	2

67	0101005025	螺栓	bolt	1
68	0301005000	垫片	spacer	2
69	0202005000	I型非金属自锁螺母	lock nut	1
69, 1	0201005000	六角螺母	nut	1
70	45A0326010	小把手装配	grip assembly	1
70, 1	45A0333010	涨紧拉簧	spring	1
70, 2	45A0334010	拉绳钩	hook	1
71	45A0323010	大把手套	handle sheath	2
72	0701006016	圆柱弹性销	spring pin	1
73	45A0336010	锁紧杆	lock linkage	1
74	45A0332010	下把手	lower handle	1
75	0101008030	六角头螺栓	bolt	2
76	5320333010	拉杆卡簧	cotter pin	2
77	0801008035	销轴	pin	3
78	45A0337010	偏芯手柄	grip	1
79	45A0225010	链条	chain	1

80	45A0224010	皮带	belt	1
81	45A0335010	涨紧拉绳	cable	1
82	45A0223010	小带轮	pulley	1
82, 1	1101005035	平键	key	1
84		发动机	engine	1
84, 1	0101008012	六角头螺栓	bolt	1
84, 11	51A0608020	小齿轮	pinion	1
84, 13	0101008025	六角头螺栓	bolt	2
84, 15	0101008055	六角螺栓	bolt	2
84, 17	51A0607010	齿轮箱后盖	gear cover	1
84, 2	1501020035	骨架密封圈	seal ring	1
84, 3	0103006025	内六角圆柱头螺钉	screw	4
84, 4	0401006000	弹垫	spring washer	4
84, 5	51A0606010	齿轮箱前盖	cover	1
84, 6	1401180003	O型橡胶密封圈	o ring	1
84, 7	51A0609010	加油孔螺钉	screw	1
84, 8	6203	深沟球轴承	bearing	1
84, 9	51A0602010	内齿轮	inner gear	1
84, 1	0105005006	内六角锥端紧定螺钉	inner hex bolt	1
84, 12	1101005020	普通平键	key	1
84, 14	6204	深沟球轴承	bearing	1
84, 16	1401009002	O型橡胶密封圈	o ring	3
84, 18	1401040003	O型橡胶密封圈	o ring	1